



**C & H LASHER FIELD SERVICE PARTS LIST  
 EFFECTIVE MAY 17, 2004**

<b>C #</b>	<b>PART DESCRIPTION</b>	<b>P/N</b>
1	GEAR HOUSING COVER	03410
2	GEAR HOUSING W/PLATE	30026
2.01	GEAR HOUSING	02000
3.01	SPECIAL REINFORCED PUSH PLATE	03693
4	FRONT STRAND WHEEL ASSY	07556
5	NUT TO CLAMP STRAND WHEEL	03030
6	STRAND DRIVE SHAFT IDLER GEAR	07565
7	REAR STRAND WHEEL ASSY	15026
8	STRAND TENSION ROLLER LOCK GUIDE	02014
9	STRAND LOCK GUIDE	15027
10	BACKROLL BRAKE SPRING	02016
11.01	COLLAR	02023
11.02	BRAKE	02674
11.03	SHAFT	02073
12	BALL BEARING 88500	03055
12.01	RIGHT HAND PINION SHAFT ASSEMBLY REPAIR	30368
13	RIGHT HAND PINION SHAFT ASSEMBLY	15011
13.1	ROLL PIN	03317
15	RETAINING RING SCREWS	07569
16	LEFT HAND PINION SHAFT	15042
17	HOUSING TO DRUM SCREWS	15028
18	ALIGNMENT DOWEL PIN	03259
19	BALL BEARING 88013	03054
21	STRAND TENSIONING ROLLER ASSY	03401
21.01	STRAND TENSIONING ROLLER ONLY	25254
21.02	ROLLER SHAFT-PIN	25255
21.08	SLEEVE	02011
21.10	HANDLE	25142
21.11	SCREW	25143
22	STRAND LOCK SCREWS	07561
23	UNIVERSAL STRAND DRIVE WHEEL(2 REQ'D)	25302
	NEW STRAND DRIVE WHEEL (2 REQ'D)	28115
23.01	STRAND DRIVE WHEEL SQUARE NUT	03039
24	STRAND DRIVE WHL CLAMPING WASHER EA.	03026
	NEW STRAND DRIVE WHEEL CLAMPING WASHER	28116
25	FRONT BEARING RING	02071
26	FRONT BEARING SCREWS	15031
27	HANDLE	04736
28	HANDLE SCREWS	15036
29	SNUBBING LASHING WIRE TENSION PULLEY	26055
29.02	SET SCREW 8-32 SNUB PULLEY	03288
30	LEFT WIRE COIL DOOR	03403
30.01	RIGHT WIRE COIL DOOR	03404

<b>C #</b>	<b>PART DESCRIPTION</b>	<b>P/N</b>
30.02	PULLEY FOR WIRE COIL DOOR	15067
30.03	SHAFT FOR PULLEY	03064
30.04	PLATE FOR WIRE COIL DOOR	03068
31	HINGE PIN FOR THUMB SCREW CATCH	04734
32	WIRE COIL DOOR THUMB SCREW CATCH	07547
33	THUMB SCREW SPRING	04735
34	WIRE COIL DOOR HINGE PIN	04803
35	COIL DOOR RELEASE SPRING	04737
36	ROTATING DRUM MACHINED CASTING	02079
37	RING GEAR	02024
38	RING GEAR SCREWS	07571
39	RING GEAR LOCKWASHERS	15014
40	REAR BEARING RING	02081
41	REAR BEARING RING SCREWS	15015
42.01	BEARING	26051
42.02	SPACER	26052
42.03	FRONT PLATE	02017
43	TOW EYE & HARDWARE	15016
44	LOCKING PIN W/CAP	15452
45	LOCKING BOLT RETAINER NUT	03087
45.01	LOCKING BOLT RETAINER	03090
46	LOCKING PIN SPRING	03089
48	LARGE PULLING PLATE STOP NUT	02018
49	SMALL PULLING PLATE STOP NUT	03367
50	FRONT CABLE LIFTER LOCKING PLATE	02020
51	FRONT CABLE LIFTER GUIDE	25144
52	PLATE & GUIDE SCREWS	15017
53	ELASTIC STOP NUT	03273
54	ECCENTRIC STUD FOR BALL BEARING-SHORT	04741
54.01	ECCENTRIC STUD FOR BALL BEARING-LONG	03091
55	FRONT CABLE LIFTER ASSY W/TOW PLATE	03407
55.01	PULLING PLATE & PIN	07204
55.02	SHAFT PIN FOR TOW PLATE	02032
55.03	SPRING	25256
55.04	BRACKET	02070
55.05	MOUNTING CASTING	02035
55.06	LEVER	02066
55.07	LOCK	02033
55.08	SPRING	02036
55.09	PIN	02037
55.10	SCREW	02038
55.11	PIN	02039
55.12	LATCH	02040
55.13	PIN	02067
55.14	STOP	02077
55.15	TUBE	02078
55.16	TUBE	25257
56	FRONT CABLE LIFTER SPRING	02068
57	FRONT LIFTER SCREWS	15019
58	VERTICAL CABLE ROLLER ASSY	03409
58.08	RIVETS	02061
59	VERTICAL SCREWS	15020
60	REAR CABLE LIFTER ASSY	03408
60.01	BRASS HINGE CASTING	27818
60.02	NOSE	02047
60.03	SHAFT	02051
60.04	CLUB	02052
60.05	KNOB & SHAFT	15005
60.06	ROLLER ASS'Y	15451

<b>C #</b>	<b>PART DESCRIPTION</b>	<b>P/N</b>
60.09	BUSHING	02044
61	REAR LIFTER SCREWS	15021
62	SPACER SCREWS	15022
63	REAR PALTE/SPACER SCREWS	15023
64	PLAIN STUD FOR BALL BEARING	25158
65.01	REAR PLATE	02076
66	STRAND ROLLER ASSY	15024
66.01	ROLLER	25145
66.02	PIN	02026
66.03	HOLDER	02029
67	STRAND ROLLER/REAR PLATE SCREWS	15025
68	SPACER CASTING	02064
69	PULLING ROPE	03165
70	STORAGE CHEST	07143
	PULL RING	02021
	COVER WASHER	03022
	COVER WASHER	03025
	COVER WASHER	03024
	COVER WASHER	03023
	BUSHING MODIFIED	25372
	BRACKET ASS'Y	03163
	OILITE BEARINGS	03056
	COVER SCREWS	15012
	WORKING ALOFT LABEL	30471
	DECAL	24627
	C LASHER MANUAL	09202





