

Used with the GMP Tornado, Breeze, Duct Rod Pusher and the Ram Rod Duct Rod Pusher

## Resetting the Counter/rate Meter when getting an error code EE

1. Make sure the battery is fully charged.
2. Turn the power to the display on.
3. Press and hold RST button for 3 seconds and release then press SEL button.

The above procedure will reset the display to factory settings. The meter must now be reprogrammed by following the procedure below.

## Programming Parameters for CUB5R Counter/rate Meter

Serial Numbers 0315 Onwards

Continue to re-program the Counter by pressing and holding SEL to re-enter programming mode. Pro-no will be displayed, press RST to move through the relevant sections. The following parameters are required for the Tornado counter:

Press RST Once:

### Counter Parameters (1-INPUT)

- INPA-B = Cnt ud - if correct press SEL.
- CNT A DP = 0 - if correct press SEL.
- CNT A SCF = 0.01 (Metric, m) or 0.0328 (Imperial, ft) - once correct press & Hold SEL.
- CNT A RST = TO ZERO - if correct press SEL.
- CNT A DIR = NOR - if correct press SEL
- CNT B LD = 0 - once correct press & Hold SEL.
- USER INP = NO - if correct press SEL.

Press RST Twice:

### Rate Parameters (2-RATE)

- RATE ENS = YES - if correct press SEL.
- RATE DP = 0 - if correct press SEL.
- RATE DSP = 60 - once correct press & Hold SEL.
- RATE INP = 100 (Metric, m/min) or 30.5 (Imperial, ft/min) - once correct press & Hold SEL.
- LO-UDT = 1.0 - if correct press SEL.
- HI-UDT = 2.0 - if correct press SEL.

Press RST Three times:

### DISPLAY (3-DSP) (3-DSP)

- SEL ENB = YES - if correct press SEL.
- RST ENB = YES - if correct press SEL.
- 0-SCROLL = NO - if correct press SEL.
- PROCODE = 222 - CODE REQUIRED TO RE-PROGRAM - once correct press & Hold SEL.
- FACT SET = NO - Press SEL Twice

General Machine Products (KT), LLC | 3111 Old Lincoln Hwy | Trevose, PA 19053  
www.gmptools.com | 215-357-5500

